INSTALLATION INSTRUCTIONS

1 Change lever handling if required; please follow instructions below.(LHR as preset)

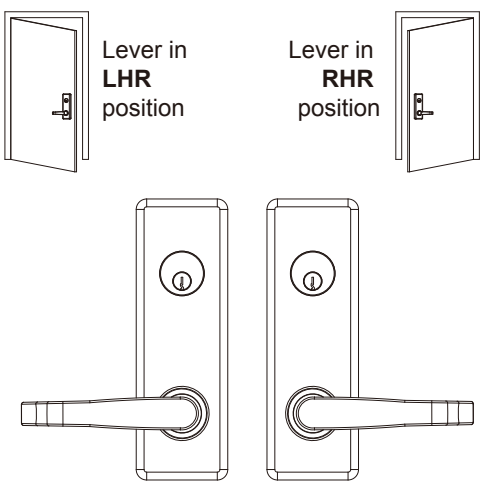

2 Prepare door for lever control installation. Transfer the vertical and horizontal center lines from inside (exit device side) of the door to outside (trim side) of door. Use extra care if the end of the door is beveled.

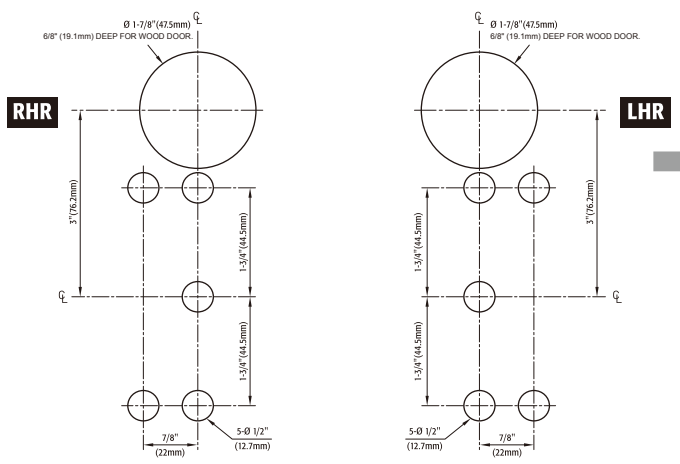

3 Install lever control with exit device.

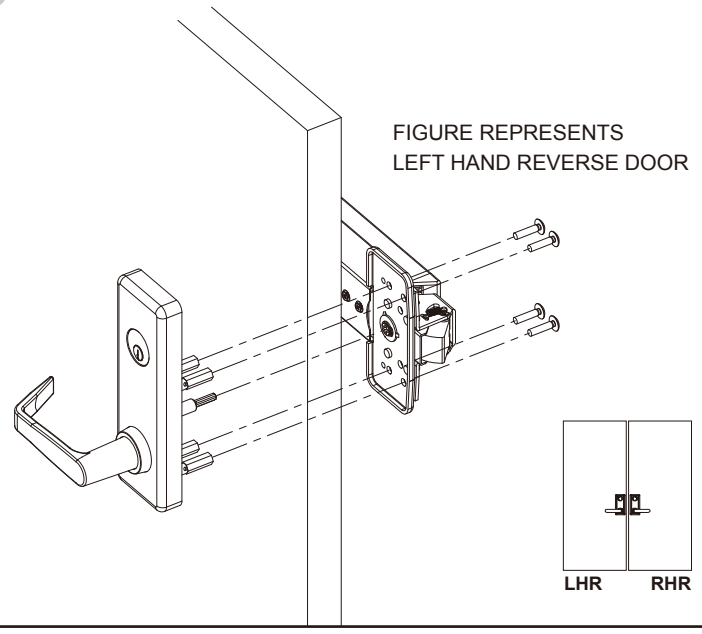

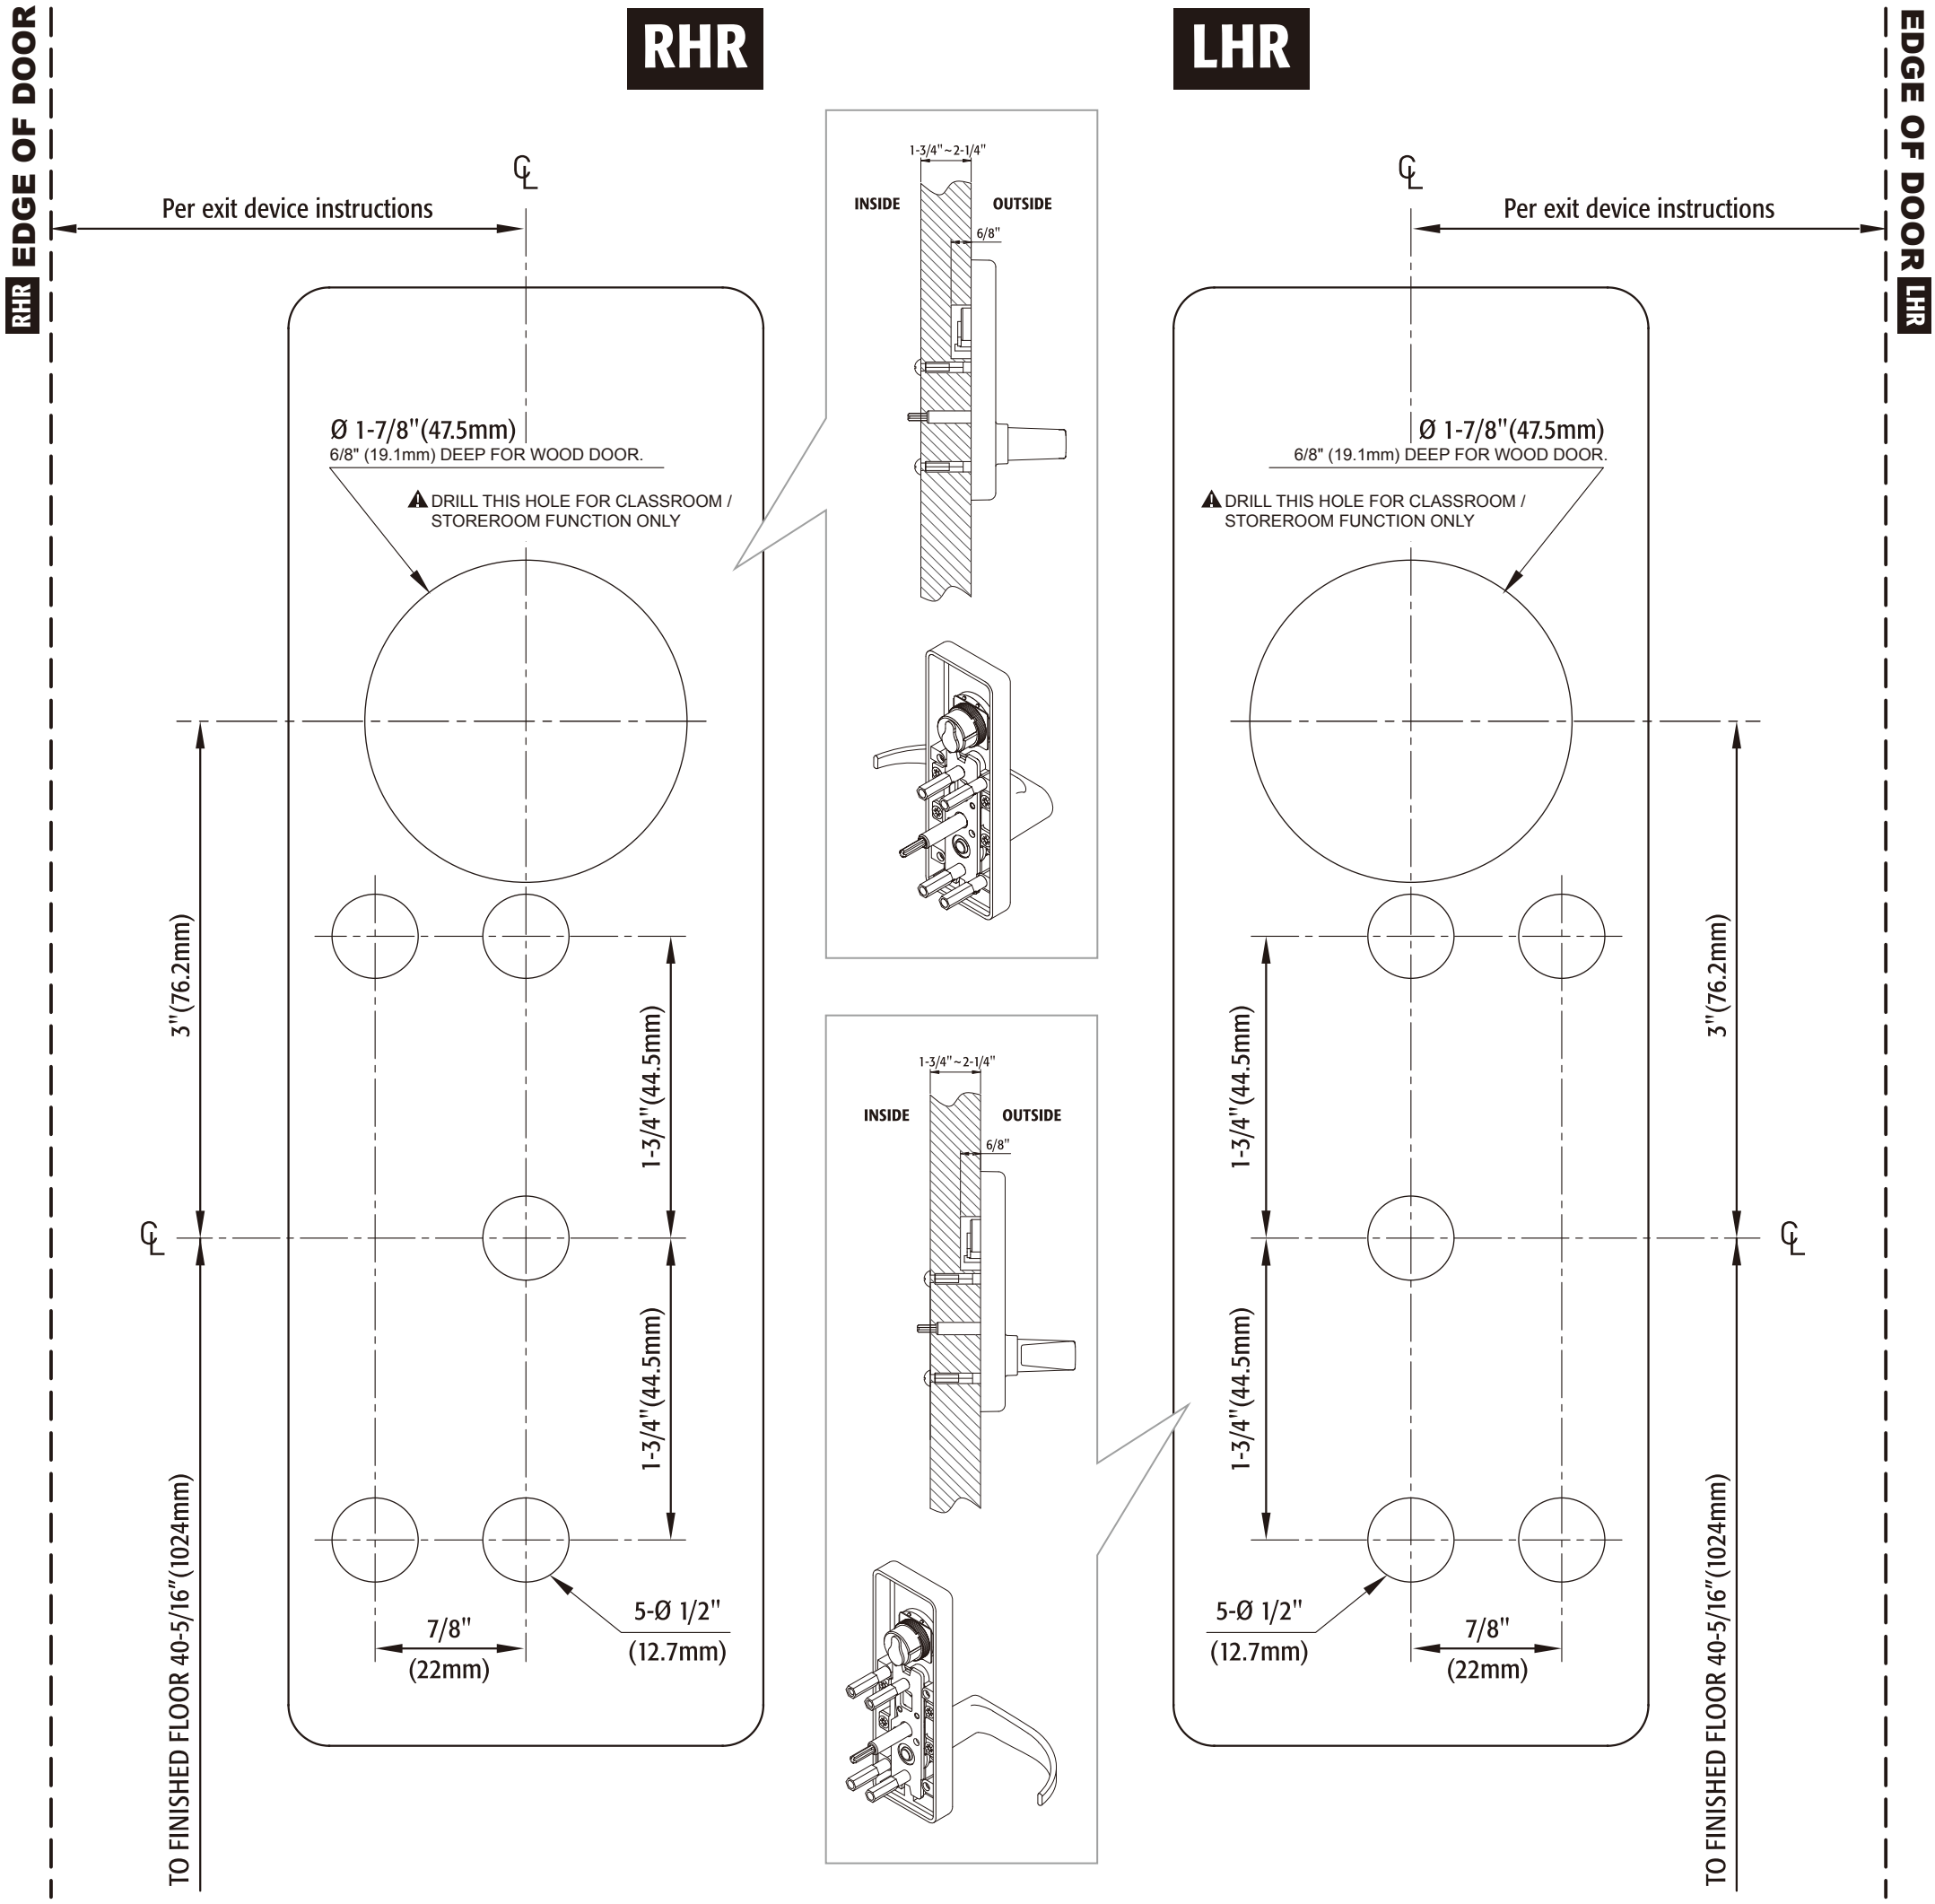

Installation instructions for changing lever handing

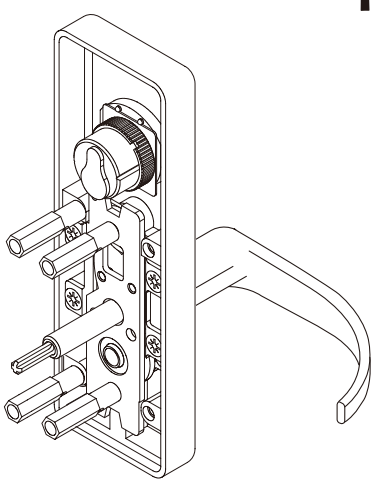

Figure represents
LHR door

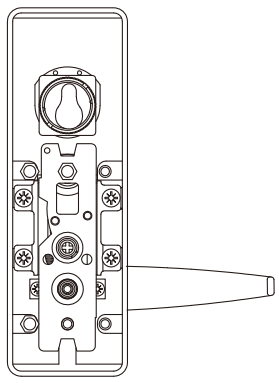

CAUTION:
The preset lever handle is **"LHR"**.
Please follow the steps below if "RHR" is needed.

---

①

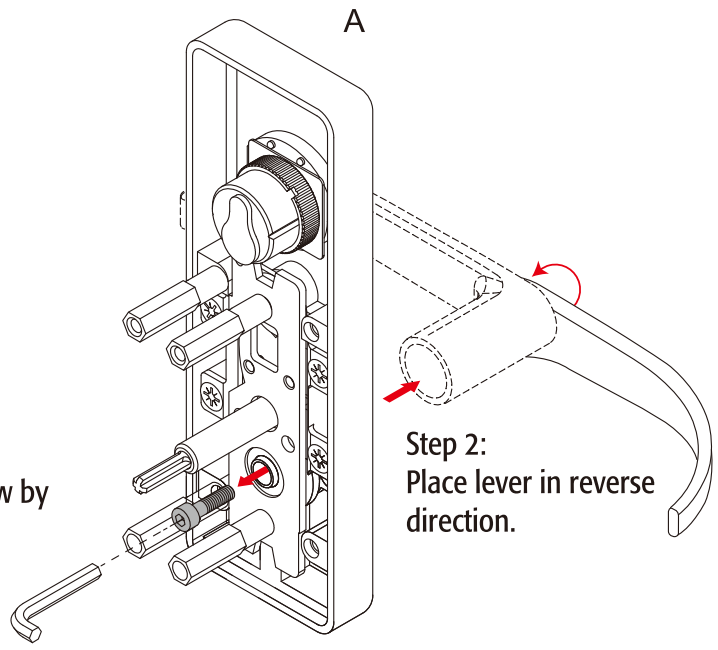

Step 1:
Remove set screw by hex wrench.

Step 2:
Place lever in reverse direction.

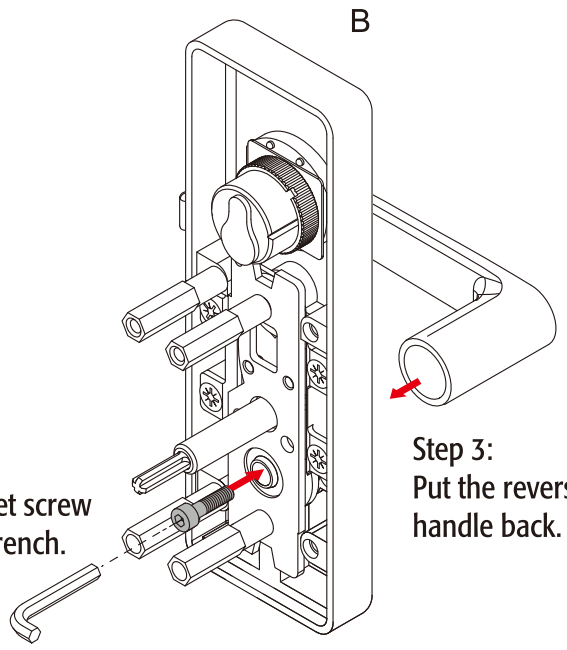

Step 3:
Put the reversed handle back.

Step 4:
Tighten set screw by hex wrench.

---

②

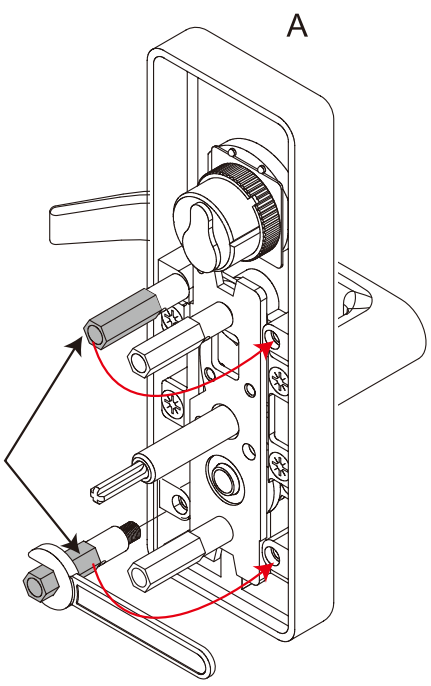

Step 5:
Remove mounting studs to indicated position.

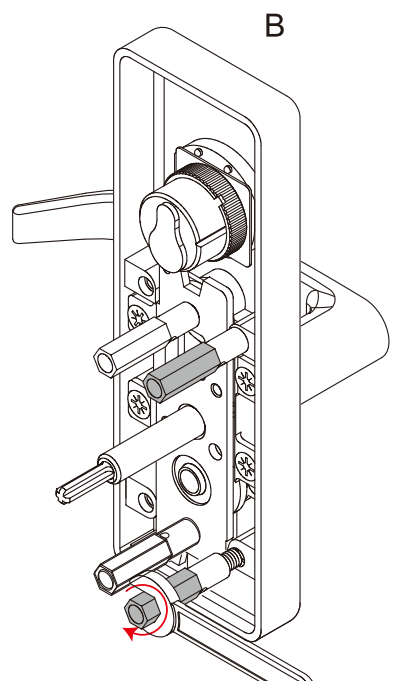

Re-install and tighten mounting studs.

---

③ The setting for switching handle direction is completed.